


Muscle Car Switch

Switch and Wiring Solutions for 1960's and 1970's Muscle Cars

1967/68 Mustang 2 Speed Windshield Wiper Switch Installation Guide

Part # FM6768W

Congratulations! You have just become the proud owner of a brand new made in the USA Muscle Car Switch 2 speed windshield wiper switch, combining modern technology with a retro look and feel. After installation in your 1967 or 1968 Mustang, the FM6768W will provide many years of reliable and maintenance-free service. This switch is designed to be a plug and play, direct replacement for the existing 2 speed switch, installing in the original location in the gauge cluster and connecting to the existing wiring harness.

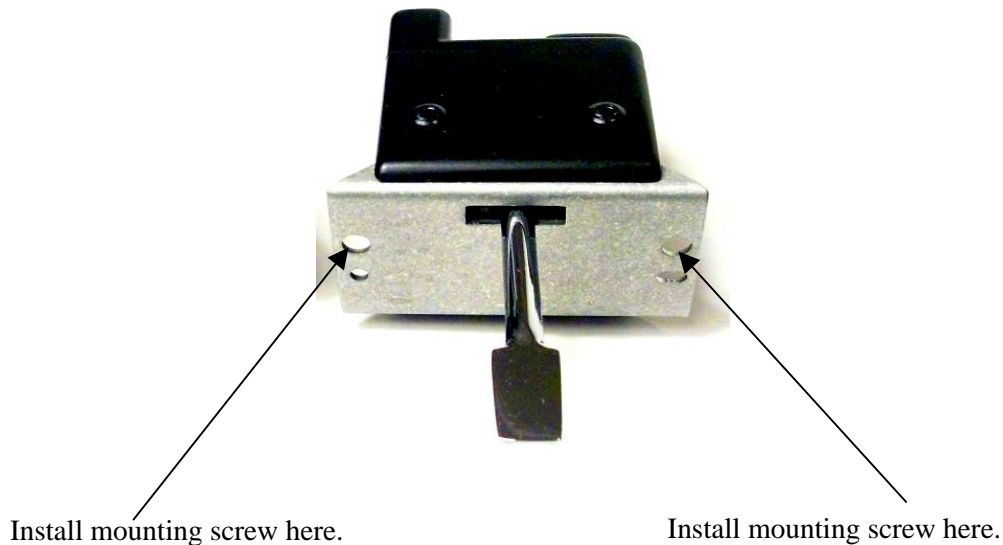

- 1 Disconnect the ground terminal of the battery.
- 2 Remove the five gauge cluster mounting screws (3 are located at the top and 2 are located at the bottom of the cluster).

Muscle Car Switch

Switch and Wiring Solutions for 1960's and 1970's Muscle Cars

1967/68 Mustang 2 Speed Windshield Wiper Switch Installation Guide

Part # FM6768W

- 3** Pull the gauge cluster slightly forward and reach behind the gauge cluster to disconnect the 5-wire windshield wiper switch connector.
- 4** Starting at the bottom of the gauge cluster, remove the speedometer cable retaining nut and speedometer cable.
- 5** Place a towel on the steering column and tilt the gauge cluster face-down.
- 6** Remove the 2 mounting screws that secure the windshield wiper switch to the gauge cluster and set the screws aside. The old switch can now be removed!
- 7** Scuff the back of the gauge cluster where the switch connects to ensure you have a good ground contact.
- 8** Install the new switch flush against the gauge cluster and lightly press the rear of the switch to hold it flush to the gauge cluster.
- 9** Slide the two 2 mounting screws into place using the cast-in relief in the housing to ease the installation.
- 10** Tighten the screws to securely mount the switch to the back of the gauge cluster and you're almost done!
- 11** Turn the switch to the "OFF" position.
- 12** Starting at the bottom of the gauge cluster, re-install the speedometer cable retaining nut and speedometer cable.
- 13** Re-connect the 5-wire windshield wiper switch connector.
- 14** Re-install the five gauge cluster mounting screws.
- 15** Re-connect the ground terminal of the battery and you're ready to enjoy many years of trouble free driving in the rain.