


Muscle Car Switch

Switch and Wiring Solutions for 1960's and 1970's Muscle Cars

1967/68 Mustang Wiper Activated Headlight Relay Controller Installation Guide

Part # M678HCI

Congratulations! You have just become the proud owner of a brand new made in the USA Muscle Car Switch Wiper Activated Headlight Relay Controller. After installation in your 1967 or 1968 Mustang, the M678HCI will provide many years of reliable and maintenance-free service. This controller is designed to be a plug and play, in-line addition to the existing headlight wiring harness.

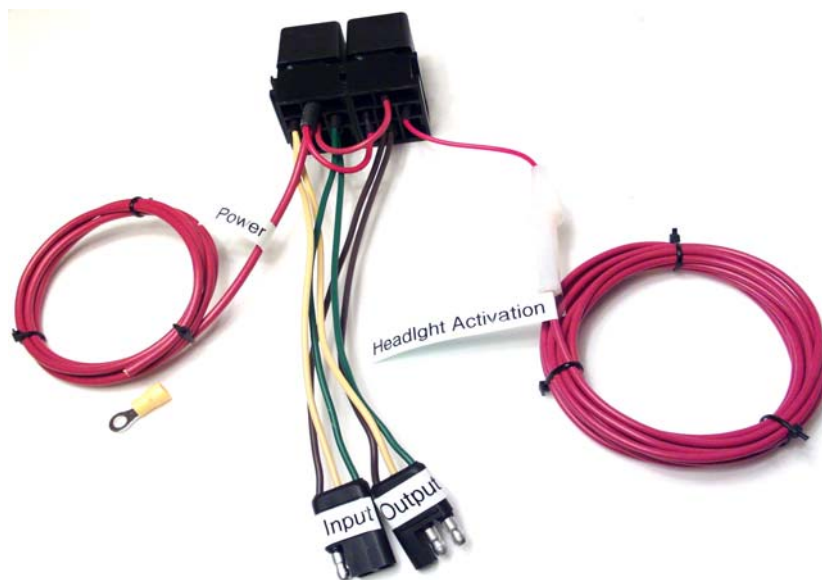

- 1 Disconnect the ground terminal of the battery.
- 2 Unplug the headlight harnesses from the main harness behind the valence panel on the driver and passenger side.

Page 1

MCS

Muscle Car Switch Tel: (650) 458-7423 FAX: (707) 795-3119 · sales@MuscleCarSwitch.com
7808 Medallion Way Rohnert Park, CA USA 94928
www.MuscleCarSwitch.com

Muscle Car Switch

Switch and Wiring Solutions for 1960's and 1970's Muscle Cars

1967/68 Mustang Wiper Activated Headlight Relay Controller Installation Guide

Part # M678HCI

- 3 Plug the Headlight Relay Controller Module Input connector to the main harness on the driver side.
- 4 Plug the Headlight Relay Controller Module Output connector to the input connector on the relay.
- 5 Securely mount the Headlight Relay Controller Module as desired.
- 6 Route the red 12 AWG Power feed to the starter solenoid, trim to length, crimp the yellow ring connector and attach.
- 7 Rout the Headlight Activation cable through the firewall into the interior of the car.
- 8 Crimp the female spade connector to the Headlight Activation cable and connect to the output port on the Variable Speed Wiper switch.
- 9 Re-connect the ground terminal of the battery and you're ready to enjoy many years of well lit and trouble free driving in the rain.

Page 2

